



Balcony glazing use and care instructions

1. Opening the glasses

Push the lock on the underside of the knob into the knob (Figure 1a). If necessary, push the adjacent glass slightly away to make room for the door glass to open.

Rotate the knob (Figure 1b) to open the upper and lower locking mechanisms. Turn the glass to the side by supporting it with your hand. Note! If the balcony glazing does not feature an opening knob as in Figure 1a, see the use instructions for Riikku full height balcony glazing.



Figure 1a



Figure 1b

2. Ventilation position

Do as in 1., but leave the door glass in the slot in the upper gate (Figure 2a) and position the sliding glass panes in a position that allows air to circulate on the balcony (Figure 2b).



Figure 2a

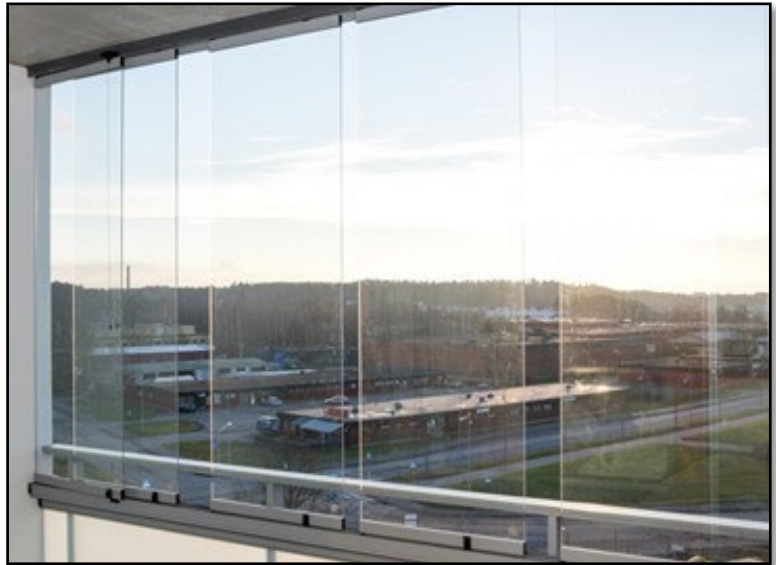


Figure 2b

3. Opening a sliding glass

Move the sliding glass close to an opened glass. Carefully push the glass to be opened against an already open glass; the runner at the bottom of the glass can now be seen through the lower gate and the glass can be opened. Turn the glass to the side by supporting its edge with your hand (Figure 3).



Figure 3

4. Attaching glass bundle to the wall lock

Open the number of glasses you want against the balcony side wall, pillar, or stopper. Take the wall lock hook (Figure 4a) to the front side of the front runner peg in the bottom strip of the glass that is opened last (Figure 4b) or to the edge of the glass, tighten the bunch by pulling on the cord, and lock the cord into the wall lock slot (Figure 4c).



Figure 4a



Figure 4b



Figure 4c

5. Closing the glasses

Release the wall lock from the slot and release the hook from the bottom strip. Turn the glasses briskly one at a time while supporting the edge of the glass with your hand (Figure 5). Leave the door glass in the ventilation position or close it all the way. When closing the door glass, make sure that there is room for it to close and that it does not come into contact with a sliding glass. After the glass element is closed, rotate the knob back into the locked position and make sure that the child-proof lock is engaged.



Figure 5

Care instructions

When the glazing is used regularly, dirt and dust cannot accumulate in between the parts. Washing and caring for the glazing regularly will also prolong its service life and keep the glazing safe and pleasant.

Check the condition of the glasses and the railing regularly: Pay particular attention to the integrity and correct placement of the seals and that there are no cracks or breaks in the glasses. And that the gap between the glasses is regular and even. Also check the condition of the laminated railing glass membrane visually for any discolouration or delamination (the glass coming loose from the membrane). If you detect any problems with the above or the fasteners, notify the building manager or maintenance provider immediately and do not use the balcony.

Note: If there is ice on the balcony glass and its components, open the glasses carefully to avoid damage.

Glass components

Glass surfaces should be cleaned regularly, the recommendation is at least twice a year, using water and neutral detergents (pH 6-8) to keep dirt from sticking to the glass.

The outer surfaces of the railing glasses can be cleaned by observing particular care using e.g. a shafted squeegee, do not climb onto the railing. Also take note of any pathways below and of any persons moving there.

Aluminium components

Aluminium profiles can be cleaned with water and a neutral detergent. Avoid abrasive materials to not scratch the surfaces.

Plastic components

The plastic runner rollers can be lubricated annually using silicon oil. Such as Riikku Silicon Oil Pro lubricant.

Visible plastic components can be cleaned with water and a neutral detergent.

Enjoy your time on your **Riikku** -balcony!

Riikku Rakenteet Oy
Lasipellontie 8
63400 Alavus,
Finland
riikku@riikku.fi
www.riikku.fi